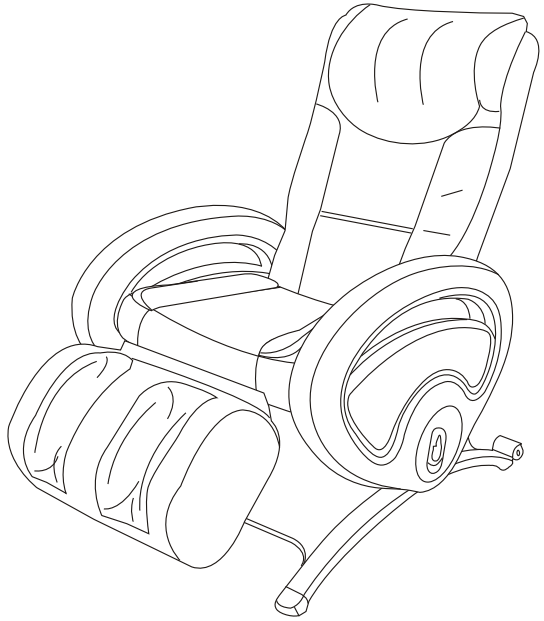

Leisure Massage Chair

RT6180
USER MANUAL

Thanks for your purchase of this product, Before using, please read this “User Manual” carefully and pay special attention to the safety precaution to ensure proper operation and use.
Please keep this “Users Manual” properly for further reference.

CONTENTS

SAFETY PRECAUTIONS ---------- 1
NAME AND FUNCTION OF EACH PART ---------- 3
Exterior structure ---------- 3
Interior structure ---------- 3
Controller ---------- 4
Button area on remote controller ---------- 5
PREPARATION BEFORE USE ---------- 6
Installation position---------- 6
Installation steps ---------- 6
USE METHODS ---------- 8
Backrest adjustment ---------- 8
Ascending& descending of leg & foot parts ---------- 9
Move methods ----------11
Turn on power supply ---------- 11
STORAGE AND MAINTENANCE ----------12
TROUBLE SHOOTING ----------13
TECHNICAL SPECIFICATIONS ----------14

SAFETY PRECAUTIONS

Safety Precautions

- Before using, please read this “SAFETY PRECAUTIONS” carefully to ensure proper operation.
- The following “SAFETY PRECAUTIONS” is of great help to your correctly use of this massage chair.
- To clearly indicate the degrees of danger and damage, the classes of accidents caused by incorrect use are classified into “WARNING” and “CAUTION” , instructions marked as followings should be strictly followed:

⚠ WARNING	Improper operation may cause injury to users.
⚠ CAUTION	Improper operation may cause users injury or product damage.

	Forbidden. Specific instruction will be indicated in the diagram drawings.(e.g, the left drawings means disassembly is not allowed.)
	Compulsory Specific instruction will be indicated in the diagram drawings.(e.g, the left drawings means to disconnect the power plug)

⚠ WARNING

● COMPULSARY	We recommend that those with any of the following conditions should consult a doctor before using. 1. Those who are using electronic medical instrument imbedded in the body, such as cardiac pacemaker etc. 2. Those that are being treated by doctors, especially those who feel uncomfortable. 3. Those who are malignant tumor patients, heart disease patients, acute patients. 4. Women who are pregnant or menstruating. 5. Those with osteoporosis or fracture spine. 6. Those with skin disease or those whose skins are injured. 7. Those whose body temperature is over 38 degrees (Febrile Phase).
PROHIBITED	Do not allow the mentally disabled to use the chair alone. (It is OK under supervision)
	Do not allow children play on massage chair.
	Do not allow more than one person to use this massage chair at a time.
	If the power cord or power plug becomes damaged in any way you must disconnect from the mains supply immediately and consult an authorized service engineer for repair or replacement.
	Do not damage, process, excessively bend, pull hard, twist or knot power cord.
	Do not use is on electric blanket or heating device to avoid fire.
NO DISASSEMBLY	Anyone else, except maintenance personnel specified by our company, should not disassemble, maintain, or remodel this massage chair. If any problem, please contact local dealer immediately.

TECHNICAL SPECIFICATIONS

Product name: Leisure Massage Chair

Product Model: RT6180

Rated voltage: 220-240V~

Rated frequency: 50/60 Hz

Rated power: 120W

Safety design: Class Ⅰ

TROUBLE SHOOTING

No.	Problem	Possible Cause	Solution
1	The sound "Xu Xu" , "Ta Ta" is heard.	It is a normal sound made by the working motor or the sound is produced when the massage ball is rubbed against the cloth.	It is normal and no need for treatment.
2	The machine can not be started up.	2.1 The power supply plug is detached.	2.1 Insert the power supply plug into the socket again.
		2.2 The power supply switch is not turned on.	2.2 Turn on the switch
		2.3 The fuse of massage chair blew out.	2.3 Replace a new one with the same mode
3	Backrest or legrest can not ascend or descend.	Over pressure is put on backrest or legrest.	Reduce the pressure on backrest or legrest.

If abnormal phenomenon still remains after above measures have been taken to the massage chair, please contact local distributor for repair and maintenance.

SAFETY PRECAUTIONS

CAUTION

COMPULSARY	Please do not continuously use the massage chair over 30 minutes, and it is limited to massage a particular part of body in 5 minutes.
	Please put the massage chair on flat ground for use.
	When adjusting the legrest or backrest, please do not exert excessive force on it; in addition, keep children and pets well clear.
	When removing power plug, please hold the insulation plug, do not pull power cord.
	Please do not use the power supply that is beyond the specified electric voltage, as this may cause fire disaster or damage massage chair.
	Before using, please uncover the back cushion to check whether backrest or fabric is damaged; if damaged, please stop using this massage chair immediately, and contact franchiser for repair immediately.
	Please do not operate the controller with damp hands, and do not put heavy objects on controller.
	Only people less than 120kgs are acceptable.
	Please do not use other therapeutic equipments together with this massage chair.
	During use, if you feel uncomfortable, please stop use immediately and consult your doctor.
	This massage chair is designed and intended for non commercial household use only, do not use the massage chair for medical treatment.
	Do not use the massage chair in damp environment to avoid electric leakage or electric shock.
	Always switch off power and remove the plug from the mains socket immediately after use and before cleaning.
PROHIBITED	To avoid causing discomfort, do not use the massage chair immediately after meals.
	Do not fall into sleep on massage chair, when the massage chair is working.
	Do not use the massage chair when you are drunk or feel bad.
	If the upholstery becomes dirty, please use only known good quality leather cleaner, do not use chemical cleaners, petrol or detergents etc, and do not spray pesticide on it.
	Do not sit on backrest, legrest, or armrest to avoid accidental injury or machine fault.
	Please do not smoke while using the massage chair.
REMOVE PLUG	Before maintenance, please pull out power plug. In addition, please do not insert or unplug the power plug with damp hands, to avoid electric shock.
	When the massage chair is not in use, please switch off power and remove the plug from socket. When power is off, please cut off power supply immediately and pull out the power plug from socket.

NAME AND FUNCTION OF EACH PART

Exterior structure

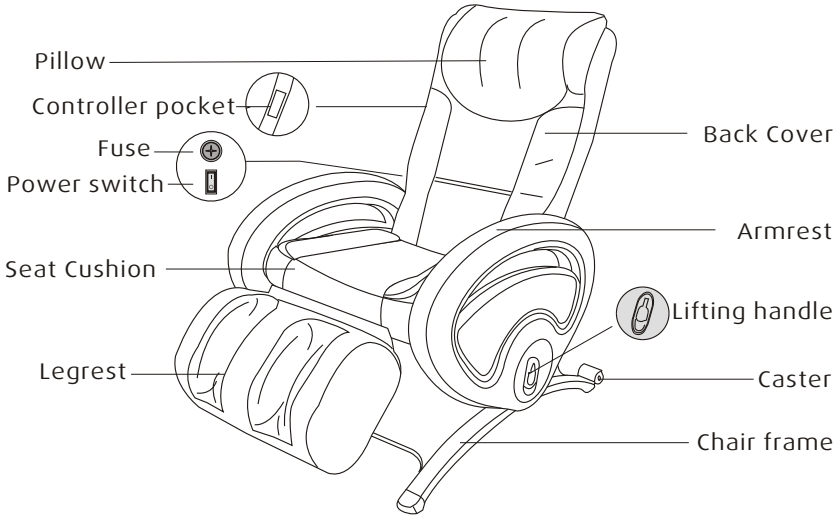

Interior structure

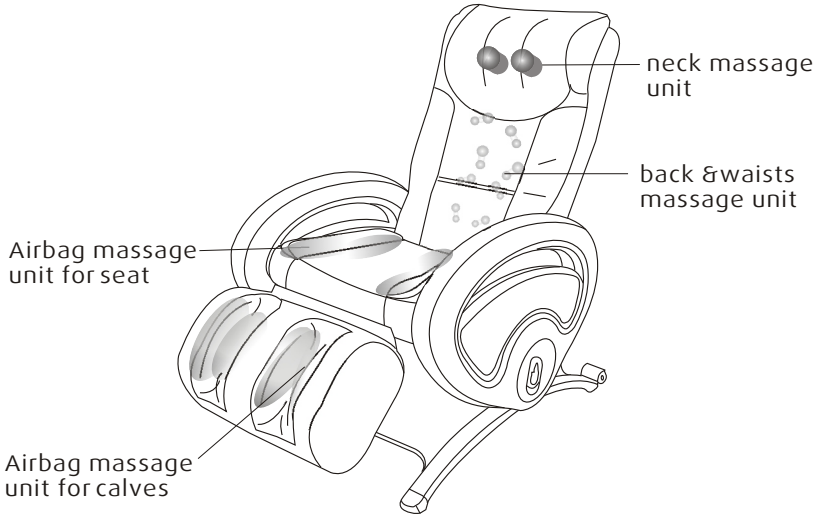

PRODUCT STORAGE AND MAINTENANCE

1. Cleaning

- Before cleaning, make sure that the plug has been pulled out from the socket.
- Use a piece of cloth that has been dipped with cleaning agents to wipe the main unit of massage chair, and then use a piece of dry and soft cloth to wipe it.

Caution

- Do not use corrosive cleaning agents like benzene or thinner to clean the massage chair, otherwise, the color of upholstery will fade or the massage chair will crack or be eroded.
- Do not iron the upholstery.

2. Maintenance

- Make sure that the plug has been pulled out from the socket.
- Sweep off the dust. Keep the massage chair clean and away from damp places.
- If the massage chair is not to be used for a long period of time, please cover the massage chair with a dustproof cover (self provided).

Caution

- Do not store the product under direct sunlight or in places with high temperature. This may cause the color of the upholstery to fade.

3. Controller

- Using wet cloth to clean the controller may cause failure of it, so it is advisable to use dry cloth to clean controller

4. Leather and lining

- Please use soft and dry cloth to clean the machine.
- Every two or three month, polish the lining with clean cloth that has been dipped with cleaning agents, and then clean it with dry and soft cloth after it dried.

USE METHODS

Move method

- The massage chair can be easily moved with the caster installed at the bottom of the chair.
- Ascend the backrest to the highest position.
- Turn off the power supply switch and pull out the plug.
- Raise the front part of the chair as shown on the picture below, and move the chair to a desirable place.

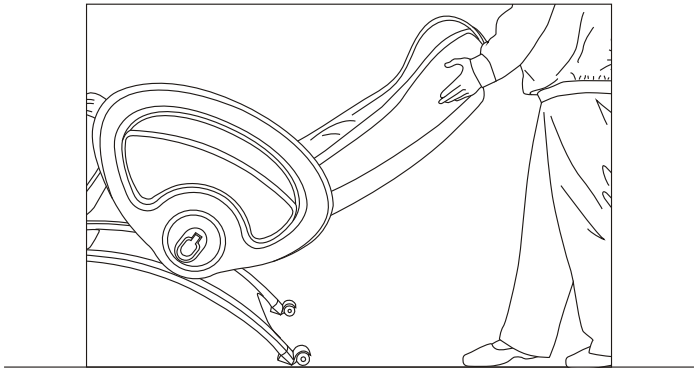

Caution

- Do not move the chair when people sitting on it.
- When move the massage chair, please hold its base and backrest instead of its armrests (at least 4 people).

Turn on power supply

- Put the power supply plug into a well grounding three-core power supply socket.
- Turn on the power supply switch installed at the lower part of backrest.

Caution

- Before starting up the massage chair, please make sure the power supply cord and exposed electric wire have not been damaged.
- Before putting the plug into the power supply socket, please make sure the power supply switch of the product has been turned off.

NAME AND FUNCTION OF EACH PART

Controller

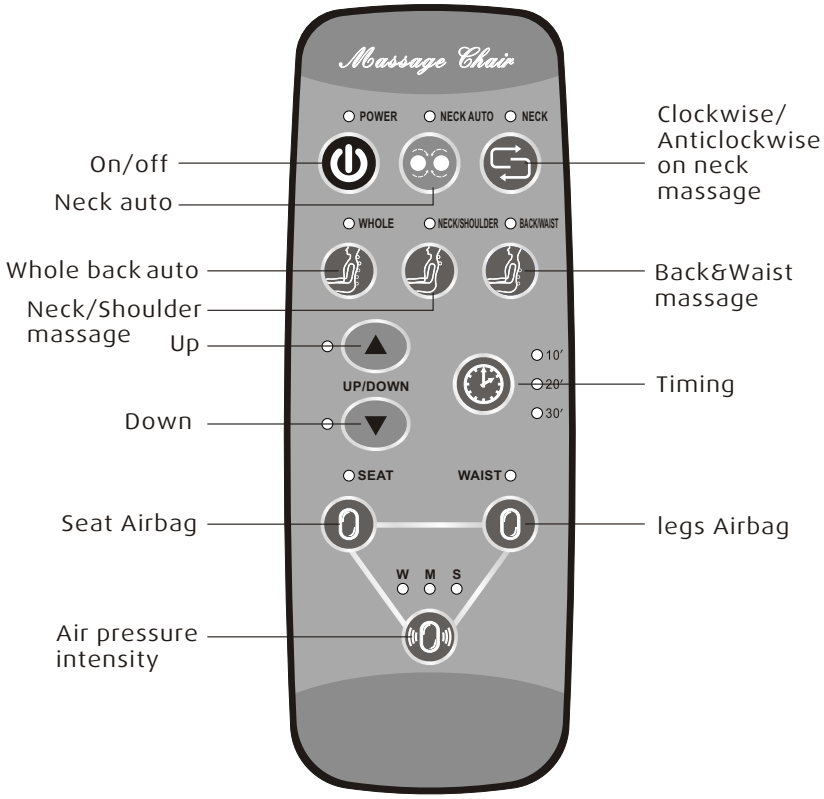

Caution

- Do not operate the controller with wet hands, do not put anything heavy on controller
- Do not allow children to play on the product to avoid any injury
- Stwich off the product and pull the plug from the socket to avoid electrical shock or any injury for children.
- Store the product if it is not used for a long time.

NAME AND FUNCTION OF EACH PART

Function description on each button of controller

Turn on/off button, turn on/off the product
When power on, the indicator is lighted, the default massage program is whole back massage, airbags on seat and legs working. When it is turned off, the indicator light is flashing.

Neck auto: when power on, press this button to turn on/off kneading massage function on neck, the corresponding LED indicator will be turned on/off.

Clockwise/Anticlockwise on neck massage, when power on, press this button to switch the direction of massage rollers to clockwise/ anticlockwise, the corresponding LED indicator will be turned on/off

Whole back massage: when power on, press this button to turn on/ off whole back massage function, the corresponding LED indicator will be turned on/off.

Neck &shoulder massage: when power on, press this button to turn on/off neck &shoulder massage function, the corresponding LED indicator will be turned on/off.

Back &Waist massage: when power on, press this button to turn on/ off back &waist massage function, the corresponding LED indicator will be turned on/off.

UP: under neck &shoulder or back &waist massage mode, press this button to extend massage distance, when the distance get to maximum, the LED indicator will flash quickly.

DOWN: under neck& shoulder or back &waist massage mode, press this button to shorten massage distance, when the distance get to minimum, the LED indicator will flash slowly.

Timing, when power on, time can be choose among 10m, 20m, 30m

Seat airbags: when power on, press this button to turn on/off air pressure massage on seat, the corresponding LED indicator will be turned on/off.

Leg airbags: when power on, press this button to turn on/off air pressure massage on legs, the corresponding LED indicator will be turned on/off.

Air pressure intensity: when seat airbags or leg airbags are turned on, press this button to adjust the intensity among weak, middle, strong, the corresponding LED indicator will be turned on

USE METHODS

Legrest UP&Down

Legrest goes down

- Pull out the controller handle on the left side of the armrest, push the legrest down with legs gradually, when it gets to the desirable angle, loosen the handle then the legrest will be locked.

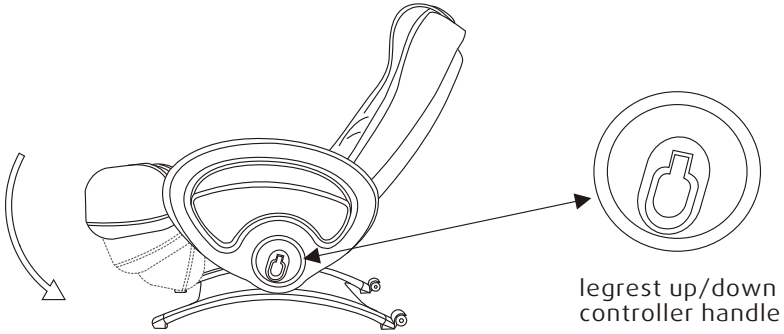

Legrest goes up

- Pull out the controller handle on the left side of the armrest, the legrest will go up gradually, when it gets to the desirable angle, loosen the handle then the legrest will be locked.

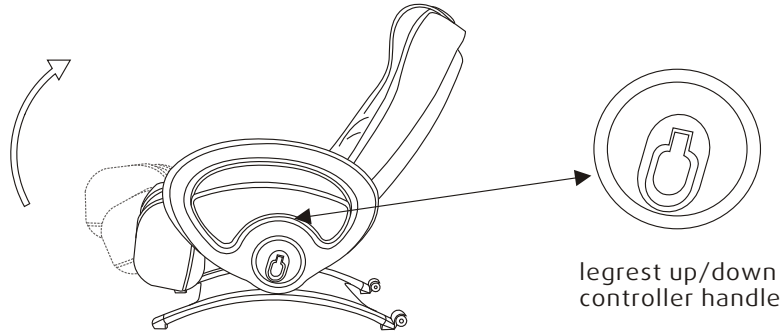

USE METHODS

Backrest adjustment

Backrest descending

- Pull out the controller handle on the right side of the armrest, push the backrest down with back gradually, when it gets to the desirable angle, loosen the handle then the backrest will be locked.

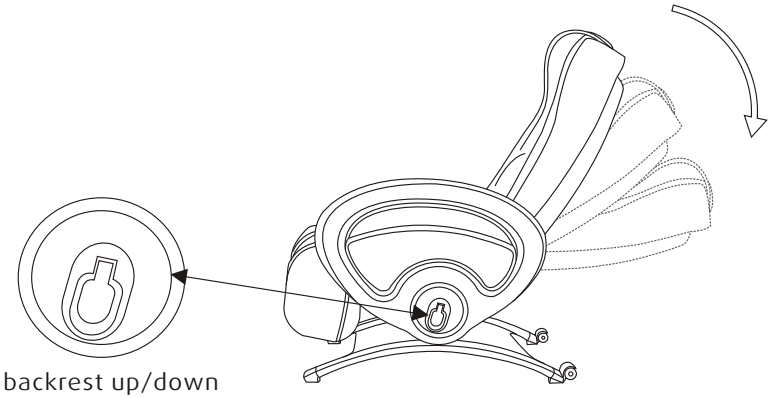

Backrest ascending

- Leave your back from the backrest, pull out the controller handle, the backrest will ascend gradually, when it gets to the desirable angle, loosen the handle then the backrest will be locked.

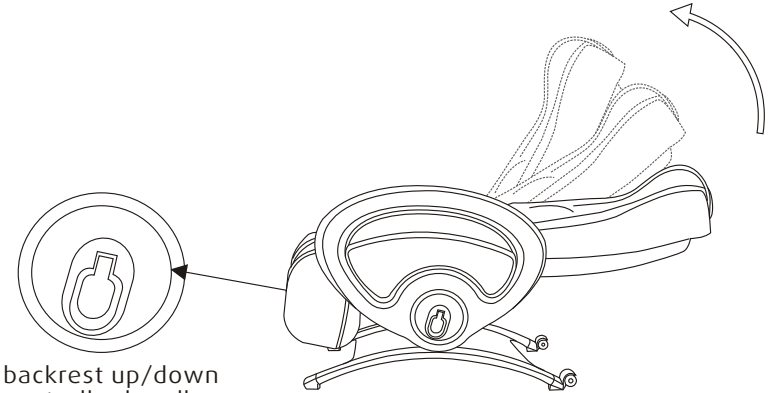

PREPARATION BEFORE USE

Installation place

- Please place the massage chair in an ample space: The horizontal interval between the backrest ascending to the highest point and descending to the lowest point should be 50 cm. The horizontal interval between the legrest ascending to the highest point and descending to the lowest point should be 14 cm. To make sure more than 50 cm horizontal distances are left for the back part of chair, and more than 14 cm horizontal distances are left for the front part.
- Keep the massage chair more than 1 meter away from TV, radio, and some other audio-visual equipment to avoid signal interference.
- The floor may be worn by the massage chair, so it is advised to put some cushion material (for instance: a carpet) under the massage chair to protect the floor and reduce noises.

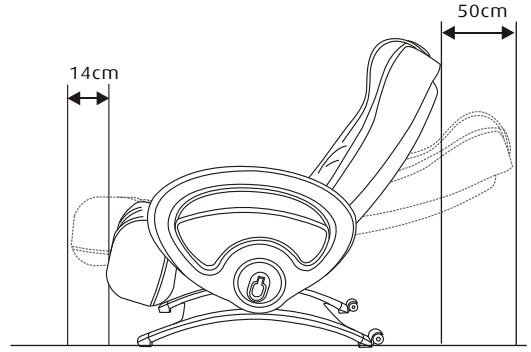

Installation Method

(4 people are suggested to move the product)

Step 1:

- Open the carton, and take out the main body of the massage chair carefully, and check whether the components are complete (please check one by one according to the packing list)

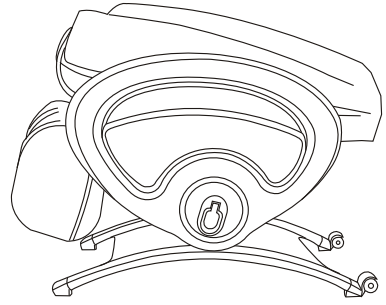

PREPARATION BEFORE USE

Step 2:

▶ Raise up the backrest of massage chair at about 115°, then it will be locked when a sound “Ka” is heard.

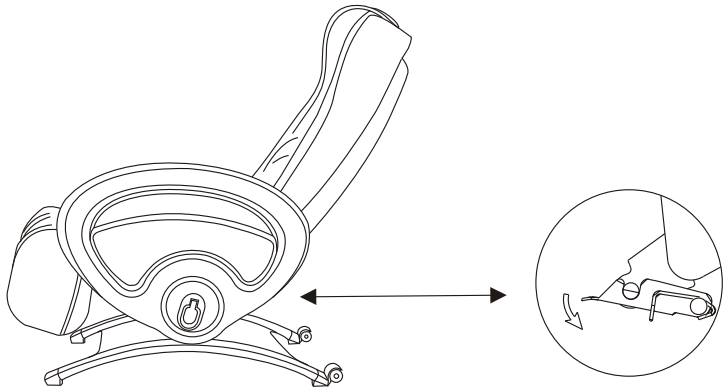

Step 3

▶ Fix the back cushion onto backrest with three zippers, fasten the pillow with Velcro, and put the seat cushion on the seat shelf.

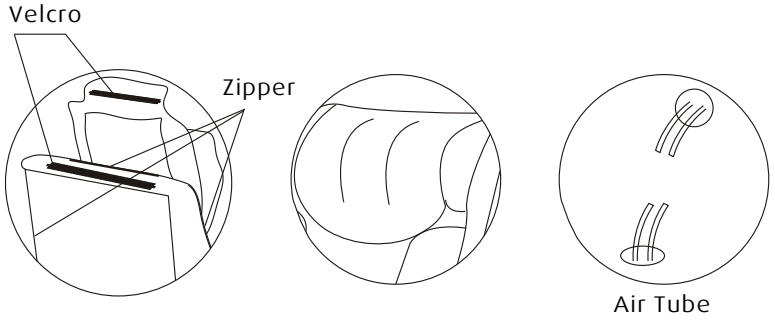

Caution

- ▶ Please do not insert your figure to the back cushion to avoid any injury.
- ▶ Please do not let children play on the product to avoid any accident happen.
- ▶ Please do not put any item into the back cushion to avoid malfunction of the chair.

PREPARATION BEFORE USE

Step 4

▶ Connect the plug to power socket, turn on the switch then it is ready for use.

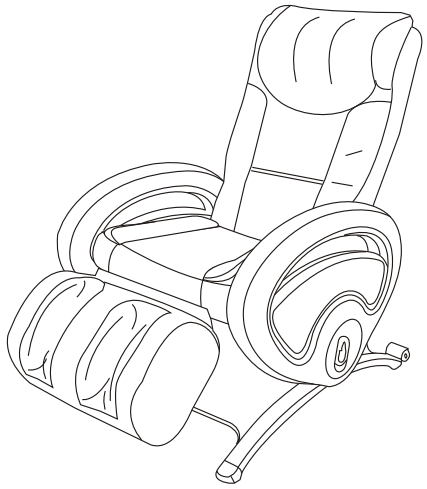

Caution

- ▶ Do not allow children to play on the product to avoid any injury.
- ▶ Turn off the power supply and pull the plug from socket after use.
- ▶ Do not use when raining and thundering.
- ▶ Switch off the product and pull the plug from the socket to avoid electrical shock or any injury to children.
- ▶ Store the product if it is not used for a long time.